

# Snappy Chef<sup>®</sup>



## USE & CARE INSTRUCTIONS SNAPPY CHEF WHISTLING KETTLES

### BEFORE FIRST USE

- Remove all labels, hand wash in hot soapy water, rinse and dry thoroughly.
- Fill the kettle halfway, and bring to boil. Discard water- the kettle is now ready for use.

### USAGE

- For most economic use, only fill with as much water as needed.
- **DO NOT** exceed the maximum water level (2.2 liters/ 1.2 liters) when filling up. Overfilling can damage the whistling device and cause serious burns due to water spatter at nozzle and lid.
- When whistling, the water has reached boiling point, and the heat source should be switched off.
- **DO NOT** pour boiling water immediately after switching of the heat source. Allow 20 seconds to ensure steam dissipates before pouring hot water. Hot steam can cause serious burns.
- **DO NOT** boil or pour water while the lid is open.
- To avoid spatter/splash back, pour water at a low angle away from your body.
- Children or people with disabilities should not handle a hot kettle.
- Discolouring / dulling of the outer layer may occur after prolonged usage.

### HEATING

The Snappy Chef Whistling Kettle is compatible with gas, ceramic, electric, radiant, halogen, and induction heat sources.

- Always handle a hot kettle with caution especially when removing the lid and refilling. Direct contact with rising steam can cause serious burns.
- When using the Snappy Chef Whistling Kettle on a gas stove **DO NOT** let the flame extend beyond the base of the kettle. This might result in damaged to the exterior paint.
- **DO NOT** place an empty kettle on any heat source- this will damage the kettle and cause discolouration.
- **DO NOT** allow the kettle to boil dry. In the event of the kettle heating without content, do not add water but remove the kettle from the heat source and leave to cool before next use.

### AFTER USE

- Cool the kettle for a few minutes before washing in hot soapy water by hand. Rinse and dry thoroughly.
- In the case of lime scale or other mineral build-up, clean the kettle regularly with a kettle cleaner or a solution of baking soda/lemon juice (10ml Baking Soda/50ml Lemon Juice).
- **DO NOT** use abrasive or acidic cleaners internally or externally, glossy outer layer will dull.
- **DO NOT** place in dishwasher.

### MISUSE

- **DO NOT** use the kettle in a microwave.

### WARRANTY

- **FULL TERMS ON [SNAPPYCHEF.CO.ZA/WARRANTY-POLICY](http://SNAPPYCHEF.CO.ZA/WARRANTY-POLICY)**